 


Washing and Drying Instructions

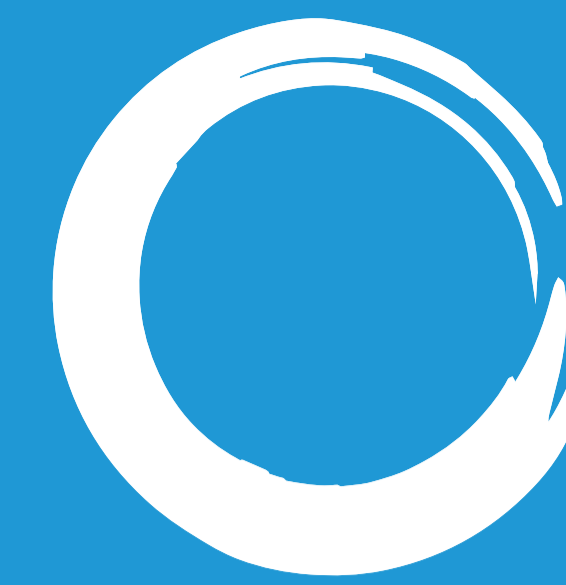

Washstation
Smart. Green. Clean.

Wash wisely

Washing guide



Check door seal and inside drum to make sure everything is clear



Load washer – max $\frac{3}{4}$ full



 
Add detergent and close door (firmly)



Scan laundry card



Select cycle

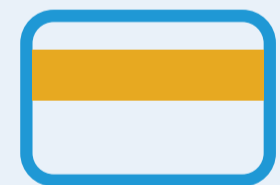

Scan laundry card

 


Press start
(If machine has start button)



Cycle finish
Wait 30 seconds for the door click to release

Drying guide

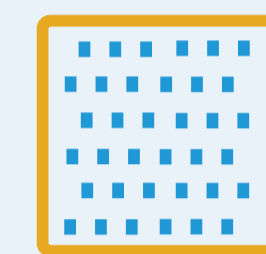

Clean lint filter
It helps clothes dry quicker



Load dryer – max $\frac{3}{4}$ full



 
Scan laundry card




Select cycle



Scan laundry card

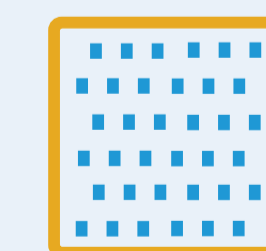

Clean lint filter ready for next user

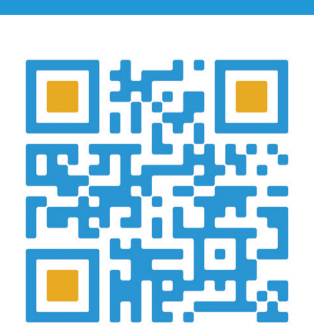 

Scan here for Espanol, Francais,
Cymreig, 中文 version

Washstation Helpline 0800 141 2331
service@washstation.co.uk