

Laundry Top Tips

- Check all pockets before wash for all foreign objects



- Do not use colour catchers



- Do not overfill washing machine, ¾ full is maximum capacity, check door seal and inside drum to make sure everything is clear



Beware as this may lead to:

- Water may not drain away
- Clothes may not spin dry properly in washer
- Clothes may be too wet to dry properly in dryer
- Door may not unlock as water needs to drain away
- Clothes may be trapped inside
- It may damage the machine, risking delays and poor wash quality



- Select the best wash and drying programme
See washing and drying cycle guides for details



- Clean out lint filter before you use dryer



Getting Started



It's only a 2-step process to top-up your laundry card

- Go to "Our Users" at www.washstation.co.uk
 - New user? – Click "Register card"
 - Already a user? – Click "Top up here" to add value
 - Take note of your 6 digit add value code, which you'll need when you're in the laundry room
- Before you use laundry machines
 - Go to laundry room to find PinMate value-adder machine on wall
 - To activate the value to your laundry card, tap it on the PinMate machine and enter your 6 digit add value code

Great – You're now ready to wash!

Washing Guide



Check door seal and inside drum to make sure everything is clear



Load washer – max ¾ full



Add detergent and close door (firmly)



Scan laundry card



Select cycle



Scan laundry card



Press start
(If machine has start button)



Cycle finish
Wait 30 seconds for the door click to release

Drying Guide



Clean lint filter
It helps clothes dry quicker



Load dryer – max ¾ full



Scan laundry card



Select cycle



Scan laundry card



Clean lint filter ready for next user



Scan here for Espanol, Francais,
Cymreig, 中文 version



Your Laundry Guide



www.washstation.co.uk

Save money, wash wisely