

# Laundry Top Tips



- Check all pockets before wash for all foreign objects



- Do not use colour catchers



- Do not overfill washing machine, 3/4 full is maximum capacity, check door seal and inside drum to make sure everything is clear



## Beware as this may lead to:

- Water may not drain away
- Clothes may not spin dry properly in washer
- Clothes may be too wet to dry properly in dryer
- Door may not unlock as water needs to drain away
- Clothes may be trapped inside
- It may damage the machine, risking delays and poor wash quality



- Select the best wash and drying programme  
**See washing and drying cycle guides for details**



- Clean out lint filter before you use dryer



# Washing and Drying Instructions

## Washer

Always check the label!

60°	Whites (Hot wash) 60 c / 140 f Whites / Bedding	RECOMMENDED CYCLE
40°	Colours (Warm wash) 40 c / 104 f Darker t-shirts, underwear, jeans and jumpers	RECOMMENDED CYCLE
40°	Bright colours (Warm wash) 40 c / 104 f Brighter t-shirts, underwear, jeans and jumpers	RECOMMENDED CYCLE
40°	Perm press (Warm wash) 40 c / 104 f Low spin for items with a permanent crease (permanent press)	NOT FOR GENERAL LAUNDRY
30°	Woollens (Cold wash) 30 c / 86 f Very slow spin	NOT FOR GENERAL LAUNDRY
30°	Delicates (Cold wash) 30 c / 86 f Very slow spin speed and reduced wash action	NOT FOR GENERAL LAUNDRY

## Dryer

Always check the label!

Whites / colours Cottons, denim, towels and bedding	RECOMMENDED CYCLE
Perm press Uniforms and other clothes for ironing	WILL LEAVE CLOTHES DAMP
Delicates Light, delicate garments	WILL LEAVE CLOTHES DAMP

# Washing Guide



You can download the App from the App Store, Google Play or Huawei AppGallery



## Using the App

Download and open the Washstation App in your smart phone and create an account



You have the option to reserve a washer for 10 mins from anywhere



Choose washer or dryer



Option to add another machine (Yes/No)



Select cycle



Proceed with payment

## Using the machines



Load machine with washing – Max 3/4 full



If you are washing, add your detergent and close door



Press start on the machine



You'll receive an email to notify you that the cycle is ending



Cycle finish (Wait 30 secs and unload)



Scan here for Espanol, Francais,  
Cymreig, 中文 version



# Your Laundry Guide



[www.washstation.co.uk](http://www.washstation.co.uk)

Save money, wash wisely