

Laundry Top Tips

- Check all pockets before wash for all foreign objects



- Do not use colour catchers



- Do not overfill washing machine, ¾ full is maximum capacity, check door seal and inside drum to make sure everything is clear



Beware as this may lead to:

- Water may not drain away
- Clothes may not spin dry properly in washer
- Clothes may be too wet to dry properly in dryer
- Door may not unlock as water needs to drain away
- Clothes may be trapped inside
- It may damage the machine, risking delays and poor wash quality



- Select the best wash and drying programme
See washing and drying cycle guides for details



- Clean out lint filter before you use dryer



How to Pay



Decide which payment card or phone app you want to use to pay for your wash or dry



...and many more



Follow instructions on the Washing Instructions poster and tap card or phone on reader when indicated

Washing Guide



Check door seal and in drum to make sure everything is clear



Load washer – max ¾ full



Add detergent and close door (firmly)



Select machine number on central pay unit



Tap phone/card



Select cycle on washer



Cycle finish
Wait 30 seconds for the door click to release

Drying Guide



Clean lint filter
It helps clothes dry quicker



Load dryer – max ¾ full



Select machine number on central pay unit



Tap phone / card



Select cycle on dryer



Cycle finish - clean lint filter ready for next user



Scan here for Espanol, Francais,
Cymreig, 中文 version



Your Laundry Guide



www.washstation.co.uk

Save money, wash wisely