








# Dryer Instructions



Washstation  
Smart. Green. Clean.

## Dryer Instructions


-  Check machine availability and book your time slot or just go down to the laundry room
-  Check lint filter and clean if necessary
-  Load machine
-  Switch on machine
-  Open airWallet app and pay for service
-  Select desired cycle on the machine and press start
-  When cycle is finished, remove washing and power off machine

## Dryer Cycles



### Whites and colours

Ideal for cottons, denim, towels and bedding

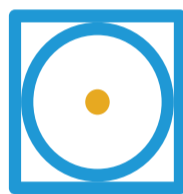

### Delicates

Light garments, uniforms and other clothes for ironing and synthetics

## Control panels

### Dryer



Scan here for Espanol, Francais,  
Cymreig, 中文 version

Washstation Helpline 0800 141 2331  
[service@washstation.co.uk](mailto:service@washstation.co.uk)