

Laundry Top Tips

- Check all pockets before wash for all foreign objects



- Do not use colour catchers



- Do not overfill washing machine, ¾ full is maximum capacity, check door seal and inside drum to make sure everything is clear



Beware as this may lead to:

- Water may not drain away
- Clothes may not spin dry properly in washer
- Clothes may be too wet to dry properly in dryer
- Door may not unlock as water needs to drain away
- Clothes may be trapped inside
- It may damage the machine, risking delays and poor wash quality



- Select the best wash and drying programme
See washing and drying cycle guides for details



- Clean out lint filter before you use dryer



How to Pay



Decide which payment card or phone app you want to use to pay for your wash or dry



...and many more



Follow instructions on the Washing Instructions poster and tap card or phone on reader when indicated

Washing Guide

- Check door seal and in drum to make sure everything is clear
- Load washer – max ¾ full
- Add detergent and close door (firmly)
- If stack of WASHER & DRYER
Select BOTTOM MACHINE (blue button) / WASHER
- Check value on reader
- Tap phone/card
When you hear 'pass your credit card'
- Wait for verbal confirmation
- Select cycle
- Cycle finish
Wait 30 seconds for the door click to release

Drying Guide

- Clean lint filter
It helps clothes dry quicker
- Load dryer – max ¾ full
- If stack of WASHER & DRYER
Select TOP MACHINE (red button) / DRYER
- If stack of 2 dryers
Select BOTTOM MACHINE (blue button) or TOP MACHINE (red button)
- Check value on reader
- Tap phone / card
When you hear 'pass your credit card'
- Wait for verbal confirmation
- Select cycle
- Cycle finish - clean lint filter ready for next user



Scan here for Espanol, Francais,
Cymreig, 中文 version



Your Laundry Guide



www.washstation.co.uk

Save money, wash wisely